

MANUAL FOR REPLACING THE CLEAVER BLADE CB-07

Please read this instruction manual carefully before replacing the cleaver blade CB-07. Adhere to all safety instructions and warnings contained in this manual.



1. Warnings and Cautions

WARNING: There is a possibility of death, serious injury, or equipment damage resulting from improper use by ignoring this documentation.

Safety glasses should always be worn during fiber preparation and cleaving operation. Fiber fragments can be extremely dangerous if they come into contact with your eyes or skin.

CAUTION: There is a possibility of personal injury or equipment damage resulting from improper use by ignoring this documentation.

- Do not grinding or modify the blade.
- This cleaver is designed for cleaving the glass optical fibers used in telecommunication. Do not attempt to cleave any other material.
- Cleaver blade is extremely sharp. Do not touch as personal injury may result.
- Take care not to place fingers in the blade during operation.
- Never leave the cleaver exposed to water, for example, from rain or moisture.

2. Components of Blade replacement kit

Name	Part Number	Qty	Remarks
Cleaver blade	CB-07	1pc.	Cleave blade for CT08
Indicator	-	1pc.	To use the blade height adjustment
Case	-	1pc.	There is a scale on the lid.
Scale Sticker.	-	1pc.	Adjustment Scale
Manual	-	1pc.	This document

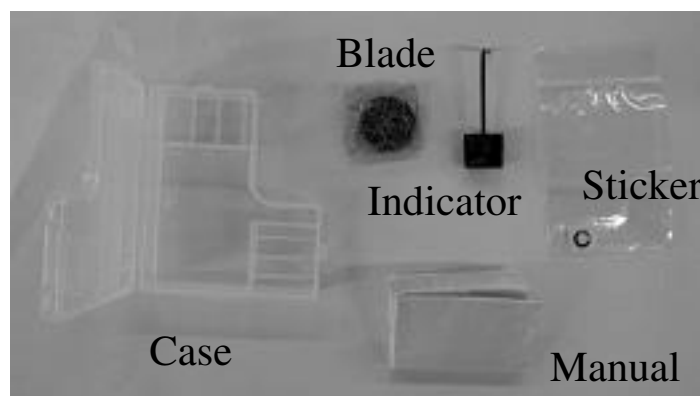


Fig2-1 Components

Hole for adjusting the position


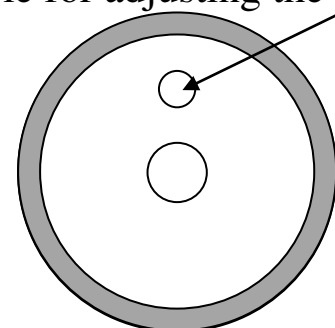


Fig2-2 Circular blade

3. Cleaver Blade Replacement

1. Adjust the Blade Position No. to "1" with Blade Rotating Dial (2).

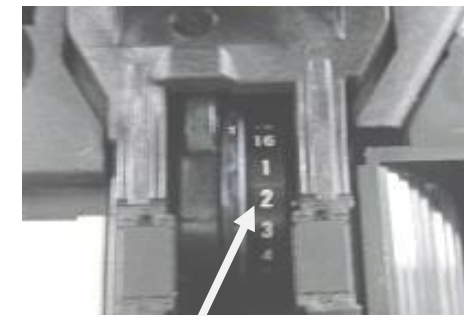


(1) Blade Position Number




(2) Blade Rotating Dial

2. Loosen the 2 screws and remove the Fiber Scrap Box from the cleaver body.
3. Lift the Lever of the cleaver until it stops. Confirm the Blade is set at the start position.
4. Loosen the 2 screws and open the Arm Cover (3). Then lift the bottom arm of the Clamp Arm until it stops.

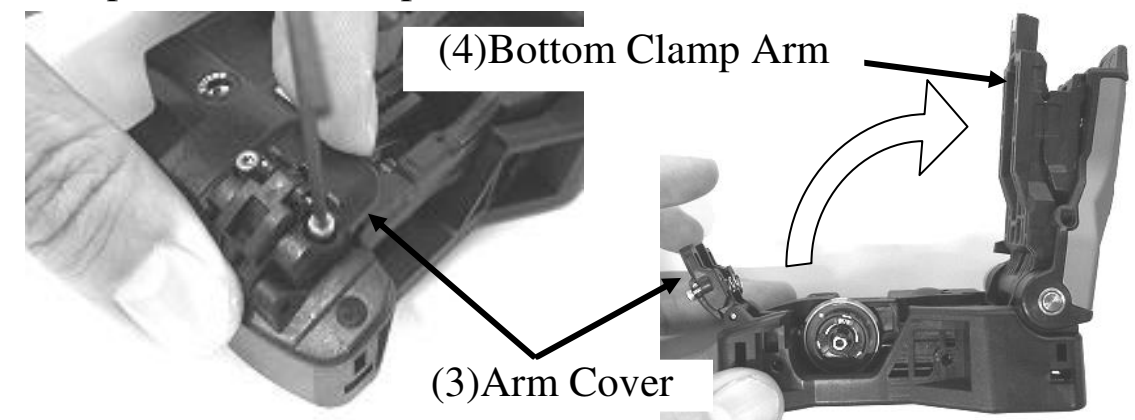

NOTE: Do not close the Lever during the blade replacement.

5. Loosen the screw located at the center of the blade. Then remove the Blade Rotary Wheel(5) from the cleaver body.

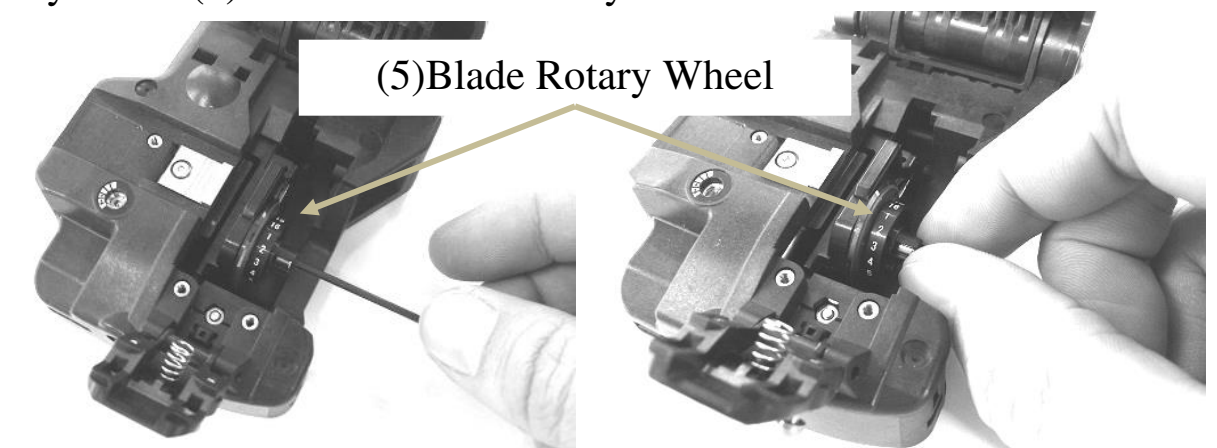

6. Remove the old blade using tweezers and then attach the New Blade to the cleaver.

NOTE: Adjust the hole on the blade to the pin of the blade holder when attaching the new blade.

7. Attach the Blade Rotary Wheel(5) to the blade. Then tighten the screw.

NOTE: Be careful not to injure your fingers during blade replacement.
Do not over-tighten the screw.

8. Turn back the bottom arm of the Clamp Arm and then close the Clamp Cover (3). Tighten the 2 screws of the Clamp Cover (3).
9. Attach the Fiber Scrap Box to the cleaver body.


4. Blade Height Adjustment

Use a single UV coated SM optical fiber when adjusting the blade height.
The blade height can be controlled by the Adjuster (6). The blade height goes up when rotating the Adjuster clockwise. The blade height goes down when rotating the Adjuster counterclockwise.

1. Loosen the Adjuster Set Screw (7) by using the hexagon wrench.
2. Rotate the Adjuster (6) 180 degrees counterclockwise.

NOTE: It is important to lower the blade height until it can't touch the fiber before adjusting the blade height.

3. Set the Case (8) at the side of the cleaver as shown Fig.4-1. Then set the Indicator (9) at the Adjuster (6). See the Fig.4-1.

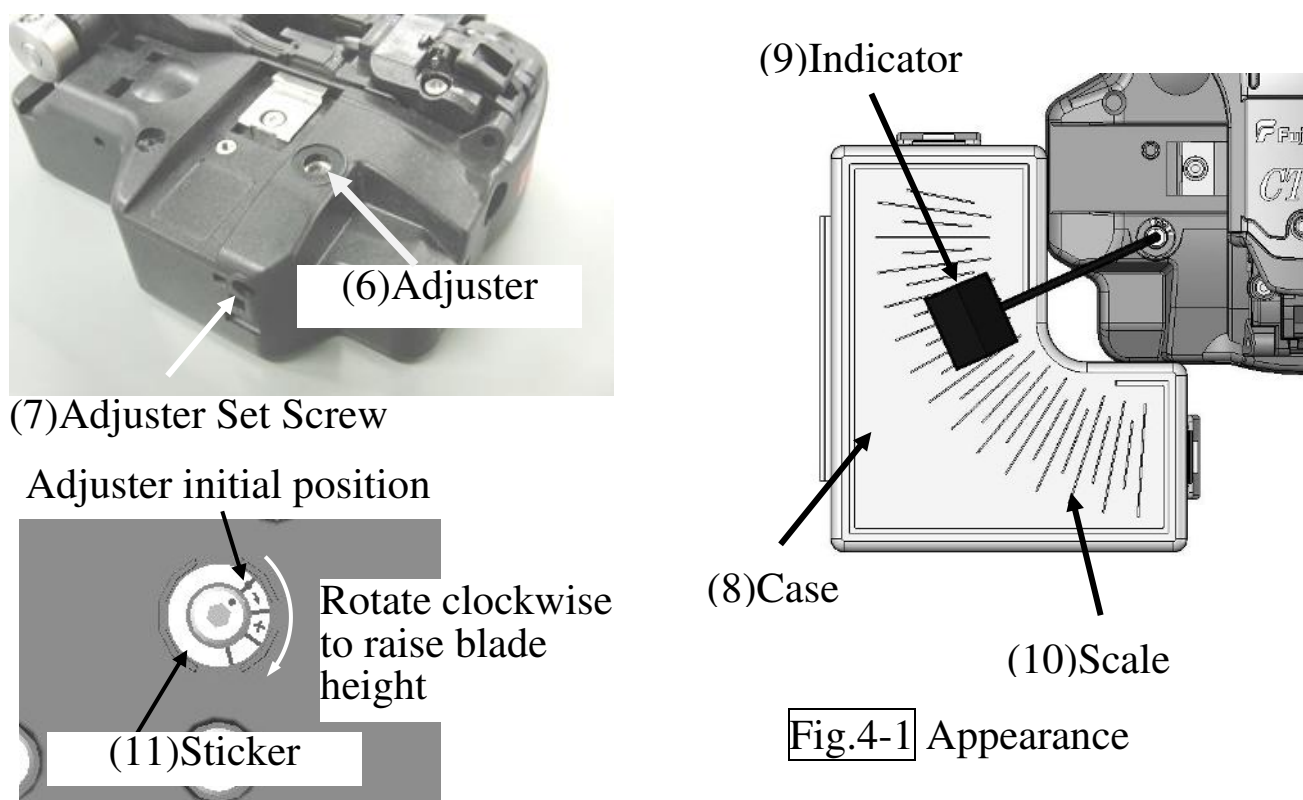

4. Set the prepared fiber in the cleaver and then try to cleave it as you normally would.
5. If the fiber is cleaved, go to Step6. If not cleaved, raise the blade height by rotating the Adjuster (6). The lid on the Case (8) has a scale. Use this scale and the Indicator (9).

NOTE: Raise the Adjuster (6) one by one. Do not rotate the Adjuster (6) too much.

6. Repeat Step4 and Step5 until the fiber is cleaved continuously 3 times.
7. Raise the blade height 6 long scales from the height decided in Step6.
8. Tighten the Adjuster Set Screws (7).
9. Attach the Scale sticker (11) at the outer circumference of Adjuster (6). Confirm the initial position of the sticker and the Adjuster (6) are set at the same position.

NOTE :

(1)If the blade height adjustment is not effective, check the following points.

Check part	Countermeasure
The blade or the Clamp arm is not attached at the correct position.	Check and re-attach these parts.
The Clamp Arm or the top of the blade is dirty.	Clean these parts.
Position "1" of the blade is lacked	Change the position of the blade to "2" and then try to adjust it.
The Clamp Arm is worn.	Replace with a new Clamp Arm.

(2) It is recommend to check the cleave angle using the splicer after step8. If the result is not good, adjust the blade height.

5. Cleaver Disposal

The CT08 contains no toxic substances and no recyclable material. If the CT08 needs to be disposed, it should be discarded as noncombustible material.

6. Contact Address

Inquiries concerning products should be made to the nearest sales agency or one of the following:



Fujikura Europe Ltd.	C51 Barwell Business Park Leatherhead Road, Chessington, Surrey KT9 2NY,UK Tel. +44-20-8240-2000 (Service: +44-20-8240-2020) Fax. +44-20-8240-2010 (Service: +44-20-8240-2029) URL http://www.fujikura.co.uk
AFL	260 Parkway East Duncan, SC 29334, U.S.A. Tel. +1-800-235-3423 (Service: +1-800-866-3602) Fax. +1-800-926-0007 (Service: +1-800-433-5452) P.O.Box 3127 Spartanburg, SC 29304-3127 URL http://www.AFLtele.com
Fujikura Asia Ltd.	438A Alexandra Road, Block Alexandra Techno Park #08-03, Singapore 119967 Tel. +65-6278-8955 Fax. +65-6273-7705 URL http://www.fujikura.com.sg
Fujikura Ltd.	1-5-1 Kiba, Koto-ku, Tokyo, 135-8512, Japan Tel. +81-3-5606-1164 Fax. +81-3-5606-1534 URL: https://www.fusionsplicer.fujikura.com

刃交換手順書 CB-07

このたびは単心光ファイバカッタ用替刃 CB-07 をお買い上げいただきましてありがとうございます。刃の交換前に、必ず本手順書をお読みください。



1. 安全に関するご注意

警告 この警告を無視して誤った取り扱いをすると、人が死亡または重傷を負う可能性があります。

光ファイバの接続作業の準備中あるいは接続作業中に、折れた光ファイバの破片が誤って目に入る可能性があります。
 安全のため、作業中は常に安全めがねを着用して下さい。
 また、光ファイバの破片が目以外に付いた場合もケガをする危険がありますので、光ファイバ屑の取り扱いには十分注意して下さい。

注意 この注意を無視して誤った取り扱いをすると、人が負傷する危険および物的損傷のみの発生する危険があります。

- 本製品を分解や研磨はしないで下さい。
- 本製品は、光ファイバを切断することを目的としたものです。光ファイバ以外の切断に使用しないで下さい。
- 切断刃に触れる際、ケガをしないよう十分に注意してください。
- 作業中に手を挟む恐れがありますので取り扱いには十分注意して下さい。
- 雨水・結露など製品が濡れた状態での使用・保管はしないで下さい。

2. 構成品

品名	型番	数量	備考
交換刃	CB-07	1 個	CT08 用
調整用レンチ	—	1 個	
ケース	—	1 個	
刃高目盛シール	—	1 枚	
刃交換手順書	—	1 部	本紙



刃交換手順書

図 2-1 内容物


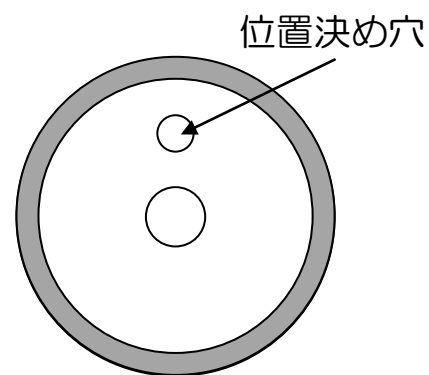


図 2-2 刃 (横)

3. 刃の交換


- 刃のポジションが 1 番であることを確認してください。1 番以外の場合は、装置本体の裏側にある刃回転ダイヤルで刃のポジションを 1 番に合わせてください。

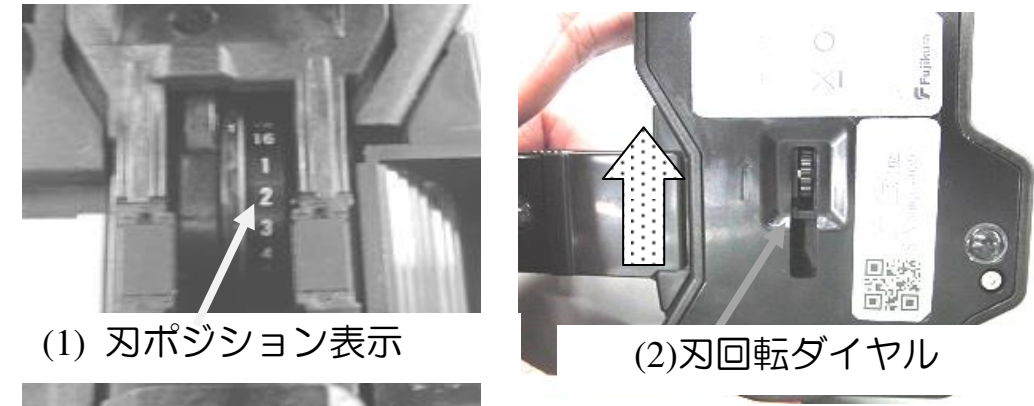

(1) 刃ポジション表示

(2) 刃回転ダイヤル


- 屑回収箱を固定しているネジ 2 個を緩めて屑回収箱を本体から取り外します。
- 切断レバーを開いて刃を切断位置にセットします
- アーム押さえ(3)を固定しているネジを緩めてカバーを開け、アーム(4)を上にあげます。

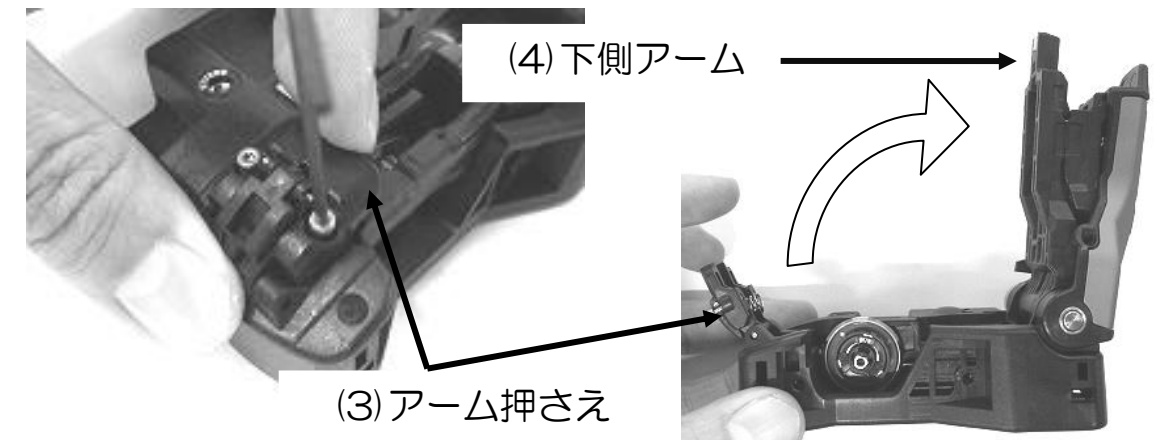

(3) アーム押さえ

注意： 切断レバーを戻すと刃が動き危険です。切断レバーは閉めないようご注意ください。

- 刃の中央にあるネジを緩め、刃回転ホイール(5)を取り外します。

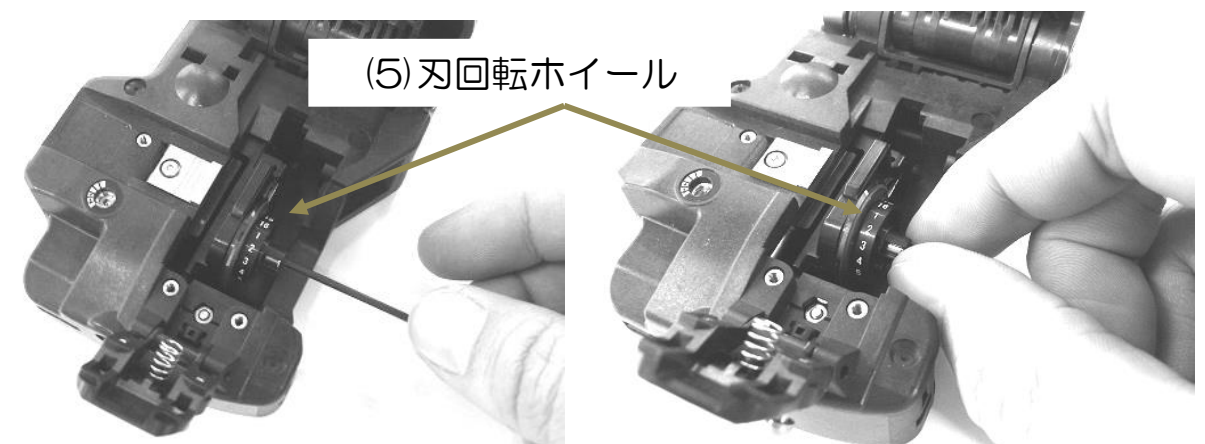

(5) 刃回転ホイール

- ピンセットなどを使い古い刃を取り除き、新しい刃を本体にセットします。

注意： カッター本体の位置決めピンが刃の位置決め穴に入るようにセットしてください。

7. カッター本体に刃回転ホイール(5)を取り付け、ネジで固定します。

注意：ケガをしないよう慎重に、作業してください。
ネジを強く締め過ぎないようにご注意ください。


8. アーム(4)の下側を元の位置に戻し、アーム押さえ(3)で固定します。
9. 屑回収箱を本体に取り付けます。

4. 刃の高さ調整

刃の高さ調整は、SM単心光ファイバ 250um径UV被覆を使って行ってください。刃の高さはアジャスタ(6)で調整します。アジャスタ(6)を時計回りに回すと、刃高が上がり、反時計回りに回すと刃高が下がります。

1. カッター本体に添付されている六角レンチ(HEX-01)等を使いアジャスタ(6)を固定しているアジャスタ固定ネジ(7)を緩めます。
2. 六角レンチを使いアジャスタ(6)を反時計回りに半周回してください。

注意：刃交換時は必ず光ファイバが切れない高さまで刃を下げます。

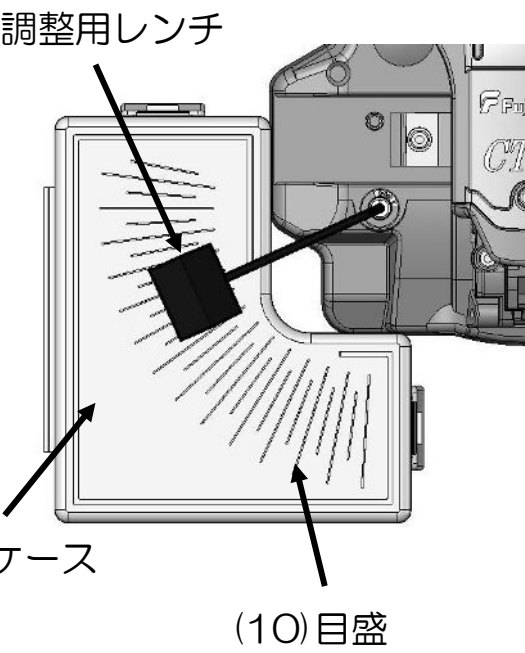3. のようにケースをカッターの横に置き、調整用レンチをアジャスタにセットします。

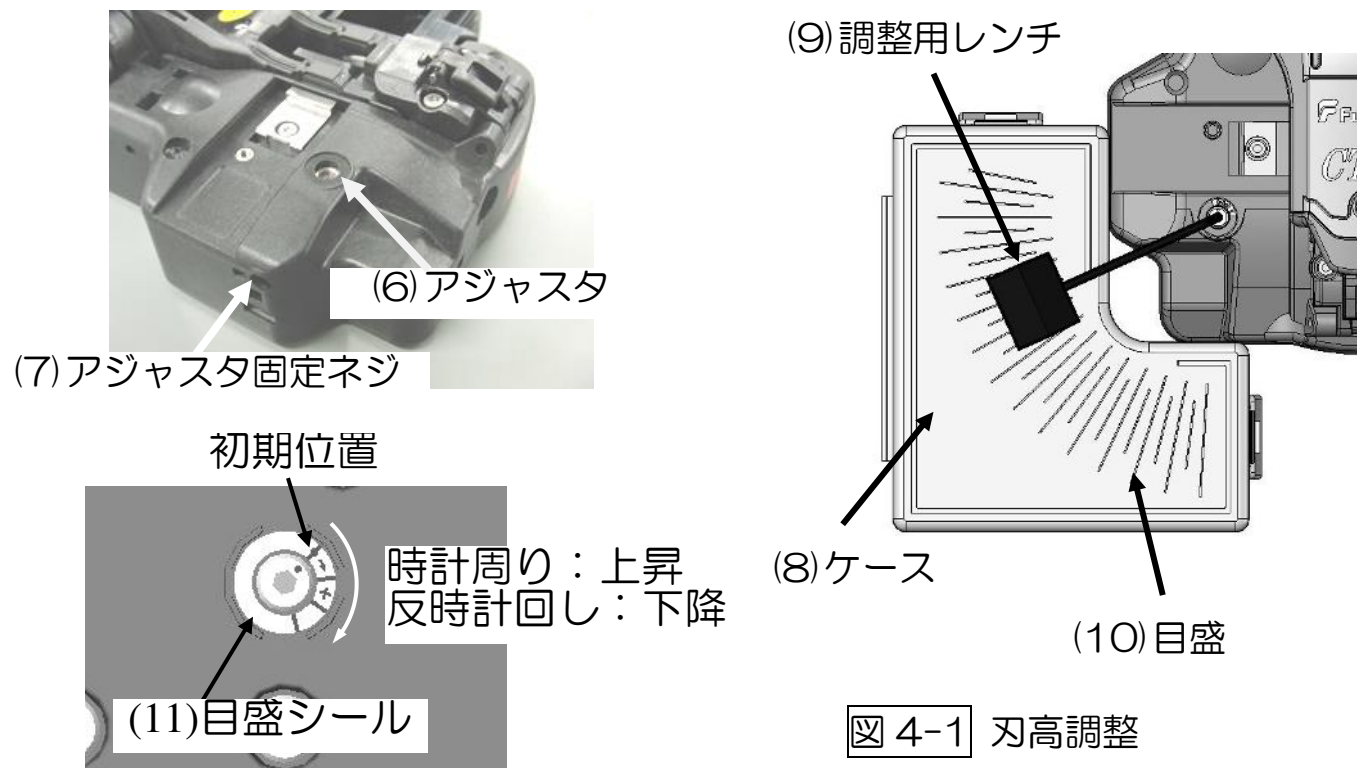


図 4-1 刃高調整

4. 通常の手順通り清掃した光ファイバをカッターにセットして、切断できるか確認してください。
5. 光ファイバが切断できない場合は、調整用レンチが示しているケース上面の目盛を目印に、調整レンチ(9)を動かして刃高を上げてください。時計回りに動かすと刃高が上がります。光ファイバが切断できるまで刃の高さを上げて行きます。光ファイバが切断できたら6へ進みます。

注意：目盛は1目盛ずつ上げるようにしてください。
切断確認は、毎回新しい光ファイバを使ってください。

6. 連続して3回切断できる高さまで刃の高さを上げてください。
7. 6の高さからケース上面の長い目盛で6目盛だけ刃の高さを上げてください。
8. アジャスタ固定ネジ(7)で、刃高が変わらないようアジャスタ(6)を固定してください。
9. アジャスタの目印に目盛シール(11)の初期位置がくるよう、新しいアジャスタ目盛シール(11)を本体に貼りつけて刃の高さ調整が完了です。

注意：

(1) 刃高さ調整が終わらない場合は以下のポイントを確認してください。

ポイント	対処
刃やアームがしっかり固定されていない	固定位置やネジの固定を確認してください。
ファイバやクランプが汚れている	清掃してください
刃の先端がキズ付いている	刃のポジションを変えて再調整
アームが傷んでいる	アームの交換を検討してください。

(2) 融着接続機を使っての検査をお勧めします。何度も切断不良が発生する際は、刃高さを調整し直してください。

5. 廃却方法(リサイクル)

光ファイバカッターは環境に有害な材質の部品を使用しておりません。また、リサイクル可能な材質の部品も使用しておりません。不燃物扱いで廃却して下さい。

6. お問い合わせ先

修理・メンテナンス等で装置を返却する場合は、故障現象を明記下さるようお願い致します。



技術的な 問い合わせ先	〒135-8512 東京都江東区木場 1-5-1 (株)フジクラ 精密機器事業部 技術部 TEL : 03-5606-1636 FAX : 03-5606-1535 URL : https://www.fusionsplicer.fujikura.com/jp/
メンテナンス 窓口	〒861-0312 熊本県山鹿市鹿本町梶屋 748 フジクラプレジジョン株式会社 サービスセンター TEL : 0968-46-4012